


TECH TIP FEBRUARY 2026**SKYCODED SCISSOR-137:LOW BATTERY CODE**

The Skyjack electric scissor models that use the SKYCODED system will quite often display a **137** fault code when the operator attempts to use the **lift up** function. The display screen will show the normal **112: EVERYTHING OK** screen and when lift is attempted, the display shows **137: LOW BATTERY**.

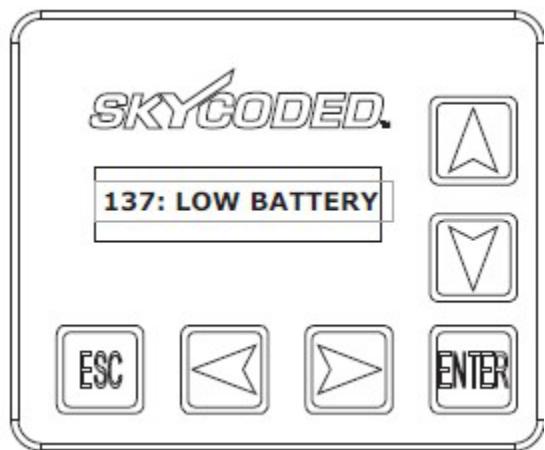

The first thought is to check the batteries, fuse, and connections/cables, but the unit drives and steers fine. The batteries usually check as good and testing for power will show all good. The SKYCODED module is not reading the battery voltage when idle, it is looking at the battery voltage when the lift function is activated.

In the cases where this code is displayed, we have consistently found that if you move to the rear of the unit at the base, next to the steps, you will find the master disconnect switch. Cycle that master switch ON and OFF several times and then

test the lift function. In most cases, the unit will usually lift normally.

The theory of what may be happening is that the Master switch is rarely turned ON/OFF. Because of this, as the machine is driven over bumps, debris, truck ramp lips etc, the constant bumping is thought to loosen the contacts in that switch a little bit – enough to cause the SKYCODED module to read a low volt input when using lift. Cycling the switch ON and OFF resets the contacts inside the switch for a better connection.

If cycling the switch does not solve the problem, load test the batteries and check connections, check the cables in the battery tray and at the back of the master switch. Check cable connections at the main contactor and at the SKYCODED module. Charge the unit fully and retest.

Anytime you need assistance or information for your Skyjack product, Please access the information available at www.skyjack.com. Just put in the serial number or model number of the machine and you can access the Operating, Parts, and Service manuals. We also have animation videos for operation and service familiarization, and repair/replacement videos. You can submit questions to service@skyjack.com email, and we also have a Technical Service Chat available by



clicking on the Chat bubble on our web pages. Also, you can always call Skyjack Product Support at 1-800-275-9522.